

TM Joey



*Stylish Elegance,
coupled with Rugged
Engineering and
Sleek Efficiency,
make Joey the Clear
Choice as the Finest
Interior Platform Lift*

Joey™ Interior Platform Vehicle Lift



Joey – The Standard For Excellence

With powerful, proven performance, and a design that could almost grace an art museum, Joey delivers convenience, simplicity and strength every time it's used.

A newly **redesigned platform**, with a special coating for increased traction, and adjustable wheel chocks on either side of a center pocket, allows the Joey to accommodate virtually any scooter or powerchair, including today's popular mid-wheel drive versions.

One button operation, **small footprint** – maintaining 2nd row seating – and a **fast cycle** time to load/unload, makes the Joey a joy to use!


Safety is a Passion at Bruno. The Joey has been dynamically tested to Federal Motor Vehicle Safety Standard 208S simulated crash loads. A solid and precise **Guide Pin** system provides alignment and stability. Joey handles loads up to **350 lbs/159 kg**.

Individual driving habits and use of operation will dictate the choice between the two versions of **power supply**. Consult your authorized Bruno dealer to pick the one that's best for you.

Joey works with every type of m



Mid-Wheel Drive Powerchairs

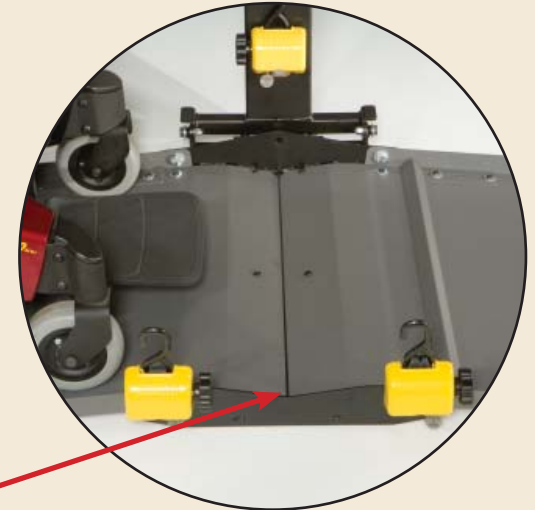

Platform features a "pocket" for mid-wheel drive powerchairs



Front-Wheel/Rear-Wheel Drive Powerchairs



Three or Four Wheeled Scooters

mobility device...

As Easy as One...Two...Three.

**Power platform down
& drive on...**



**Raise platform and
secure the belts...**

**Power platform into
the vehicle.**



Standard Features



Indicator light – illuminates when Joey is safely docked and transport ready



Obstruction sensing safety plate – disables unit when activated



Hand-held pendant with single switch control



Easy Drive On/Drive Off Platform – designed for every type of mobility device. Self-leveling for uneven surfaces. Access either side of platform. No reversing necessary



Securement belts – designed for one hand operation. Keeps your mobility device safely stowed (optional retractable belts also available)



Small Footprint – many applications require no drilling (as shown)



“My new Joey is wonderful! Loading and unloading my scooter is a snap, and Joey leaves plenty of room in my minivan.”

Mrs. Ruby Pittman

Innovation... for your Independence & Convenience.

KEY SPECIFICATIONS

	VSL-4000	VSL-4000HW
Maximum Weight Capacity	350 lbs/159 kg	350 lbs/159 kg
Fully Powered Operation	yes	yes
Hand-Held Pendant Control	yes	yes
Single Switch Operation	yes	yes
Obstruction Sensing	yes	yes
Self-Contained Power	yes	no
Emergency Backup	yes	yes
3 Year Warranty	yes	yes
Can Reinstall in Another Vehicle	yes	yes
Eligible for Auto Manufacturer Rebate	yes	yes

IMPORTANT: Contact your authorized Bruno dealer for specific details on your vehicle!

Power Supply

(Contact your authorized Bruno Dealer to find out which version is best for you.)

VSL-4000

This version of Joey uses Bruno's industry leading stairway elevator technology for power. Using its own self-contained battery, the VSL-4000 version will operate even if the vehicle loses power.

VSL-4000HW (hardwire version)

This version of Joey is virtually identical to the VSL-4000 except that it uses the vehicle battery for power, with a steel enclosed heavy-duty cable carrier to move the Joey along its path.

Vehicle Applications

Joey works in over 25 different vehicles including ...

Chrysler	Ford Freestar	Chevy Venture	Toyota
Chrysler Town & Country	Ford Windstar	GMC Safari	Scion xB
Dodge Caravan	Mercury Monterey	GMC Savana 1500	Toyota Sienna
Dodge Grand Caravan	Mercury Villager	Oldsmobile Silhouette	Others...
Plymouth Voyager	GM	Pontiac Montana	Honda Odyssey
Plymouth Grand Voyager	Buick Terraza	Pontiac Montana SV6	Hyundai Entourage
Ford	Chevy Astro	Saturn Relay	Kia Sedona
Ford Aerostar	Chevy Express 1500		Mazda MPV
Ford Econoline E-150	Chevy Uplander		Nissan Quest

(Contact your authorized Bruno Dealer for specific years and models.)

Represented by:

BRUNO INDEPENDENT LIVING AIDS, INC.®

1780 Executive Drive, P.O. Box 84, Oconomowoc, WI 53066

(262) 567-4990

Toll-Free: 800-882-8183

FAX: (262) 953-5501

www.bruno.com

